



同梱品

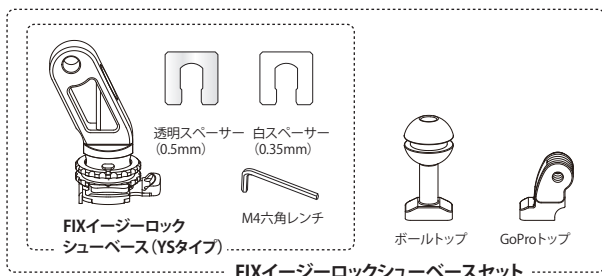


各部名称

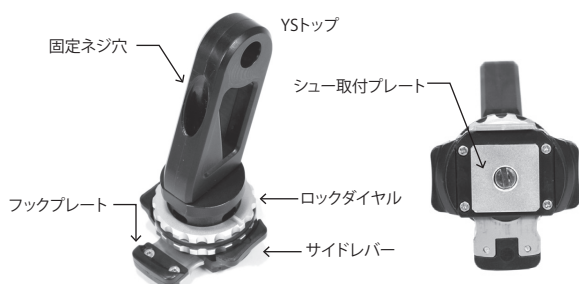

取付方法


1. ロックダイヤルとサイドレバーの指標(溝)を合わせます。

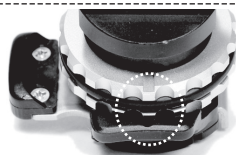

2. 左右のサイドレバーを引き上げ、シュー取付プレートをアクセサリシューに差し込み、サイドレバーを離します。



3. フックプレートを軽く押して、アクセサリシュー端に引っ掛けます。

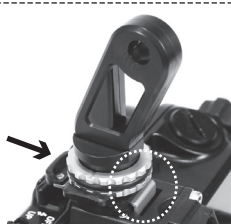

4. ロックダイヤルを時計回りに回して固定します。



ロックが不十分な場合

本製品はNauticam社製ハウジングのアクセサリシューに準拠した規格となっているため、カメラ/ハウジングによってはロックの効きが不十分な場合があります。もしロックダイヤルが回転せず、ロックが不十分な場合、またはロックが外れてしまう場合は、付属のスペーサーをご使用ください。



取外方法

1. ロックダイヤルとサイドレバーの指標(溝)を合わせてロックを解除します。



2. 左右のサイドレバーを引き上げて、本体をアクセサリシューから取り外します。



トップアダプターの換装

1. 固定ネジ穴に付属のM4六角レンチを差し込んで、YSアーム内部の固定ネジ(長さ6mm)とスプリングワッシャーを取り出し、YSアームをベースから取り外します。



ボールトップの場合

2. ボールトップをベースに取り付け、付属の固定ネジ(長さ30mm)と平ワッシャーで固定します。



GoProトップの場合

2. GoProトップをベースに取り付け、付属の固定ネジ(長さ6mm)とスプリングワッシャーで固定します。




※各トップアダプターとネジ&ワッシャーの組み合わせを間違えないでください。また、紛失にご注意ください。



使用後は必ず水洗いの上、アクセサリシューから取り外して保管してください。

ロックの効き具合は、カメラ/ハウジング側のアクセサリシューの厚みに左右されます。ロックダイヤルの指標が右図のような位置になるよう、厚さの異なる2種類のスペーサーを付け替えて調整してください。

1. 取り外しの際にはスペーサーを紛失しないようご注意ください。

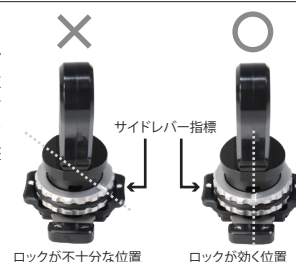

FIX Easy Lock Shoe Base


FIX Easy Lock Shoe Base set

40249

40248

Fisheye

Included items

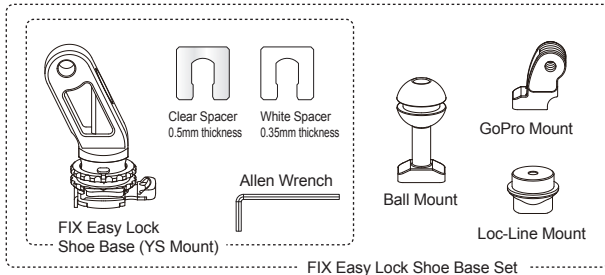


Name of Parts




How to Attach


1. Match the index of Side Lever with Lock Dial.

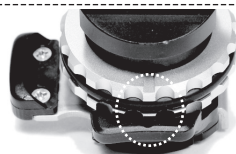

2. Pull up Side Lever, then insert Shoe Plate in accessory shoe and release the lever.

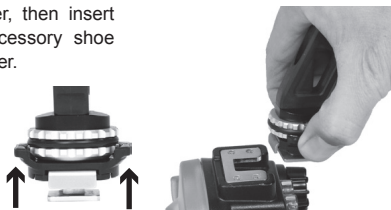

3. Press the Hook Plate lightly, and fit it in the accessory shoe.

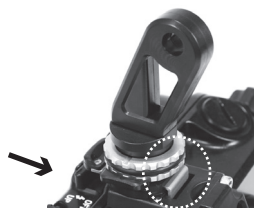


4. Turn the Lock Dial clockwise and fix it.



How to Detach

1. Match the index of Side Lever with Lock Dial.

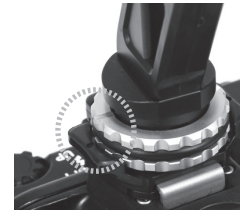

2. Pull up Side Lever, and remove the base from accessory shoe.



Replacement of the mount

1. Remove the fixed screw and a spring washer by allen wrench, then take off the YS mount from the base.




Ball Mount

2. Attach the Ball Mount to the base and fix it with a bundled fixed screw(30mm) and a flat washer.



GoPro Mount

2. Attach the GoPro Mount to the base and fix it with a bundled fixed screw(6mm) and a spring washer.

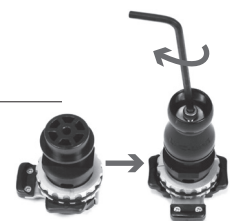

Loc-Line Mount

2. Attach the Loc-Line Mount to the base and fix it with a bundled fixed screw(30mm) and a flat washer. The Loc-line tube is not included.



* Do not mix the combination of each mount and screw/washer.
And please be careful about loss.



After use, rinse it with fresh water. Do not keep it with being attached to accessory shoe.

If the lock does not work...

The shoe plate of this product is a standard in conformity with accessory shoe of Nauticam housing, the force of the lock may be insufficient depending on a camera/housing. Please insert included spacer when the lock does not work or comes off.



The force of the lock depends on the thickness of accessory shoe of a camera/housing. Please adjust a right position by adding a spacer of two kinds varying in the thickness. When the index of the lock dial is at the position such as the "OK" figure, it is correct.

- 1 Please be careful not to lose a spacer when detaching the base.

